 


The following provides steps for downloading and installing the latest operating software into your inReach Mini while it is connected to a computer. Once this is done, the battery should charge as normal.

**Important:** A Windows PC is required for the use of these steps.

 
If you feel uncomfortable with this process, or struggle through any part of it, please contact [Garmin Product Support](#).

1. Select and download this file ([inReachMini\\_388665.zip](#)) to your computer.
2. Connect your inReach Mini to the computer via micro USB cable.
3. Wait at least 10 seconds.
4. On the Mini, press and hold the *Down + Back* buttons, then also press and hold the *Power* button.
5. Continue to hold the *Down + Back + Power* buttons for up to 10 seconds until the USB and gear icons appear on the display.
6. Locate and double-click the downloaded file: inReachMini\_388665.zip.



**Note:** If prompted to Extract or Run, select **Extract**. You may also need to select where the files are extracted to.

7. Locate and double-click the extracted folder.
8. Double-click FWFlasher.exe.



9. Select *Program Device* when available.

**Note:** It may be necessary to disconnect and reconnect USB for this button to become available.

10. The software will complete the installation.
11. Allow the battery to fully charge.

Once this current version of the inReach Mini software is installed, Garmin Express will allow for any future software improvements to be installed and the inReach Sync Application installs any Account changes. This link provides those steps - [Updating the Firmware and Syncing Account Information to an inReach Mini](#)